


3.5" HDD to 5.25" Drive Bay Bracket Installation Guide




Step 1 - Install the rubber between two bracket for anti-vibration



Step 2 - Install the bracket onto both side of the hard drive

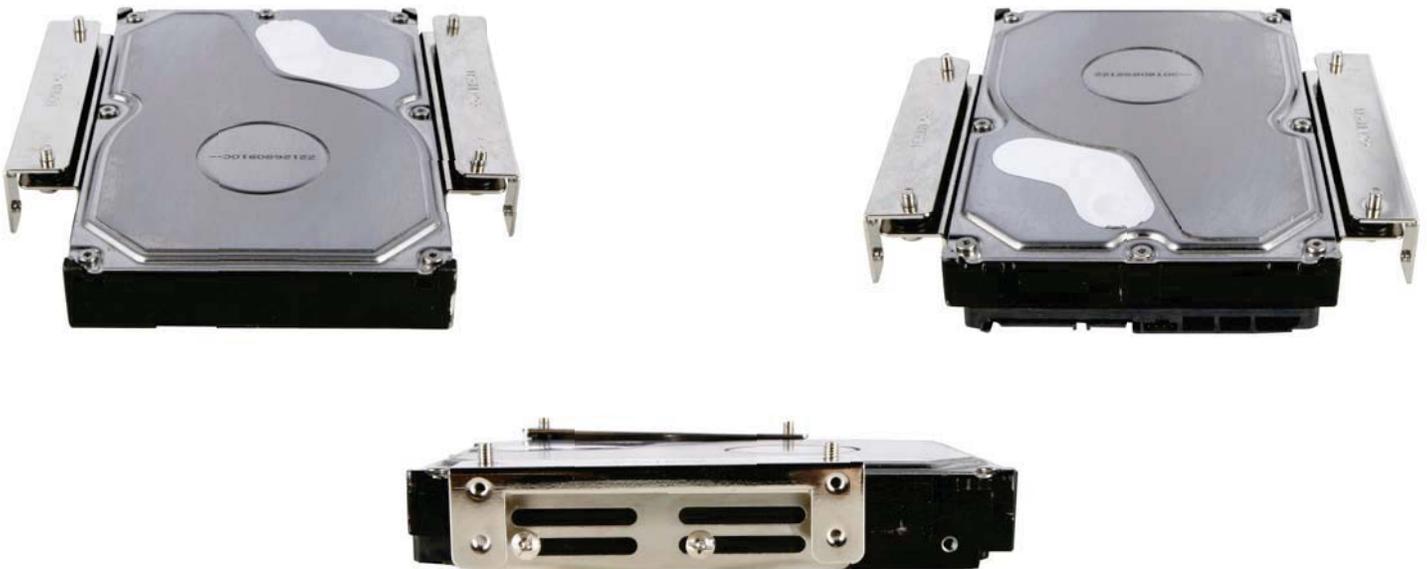

Step 3- insert DIY-RHF03 into 5.25" Drive Bay

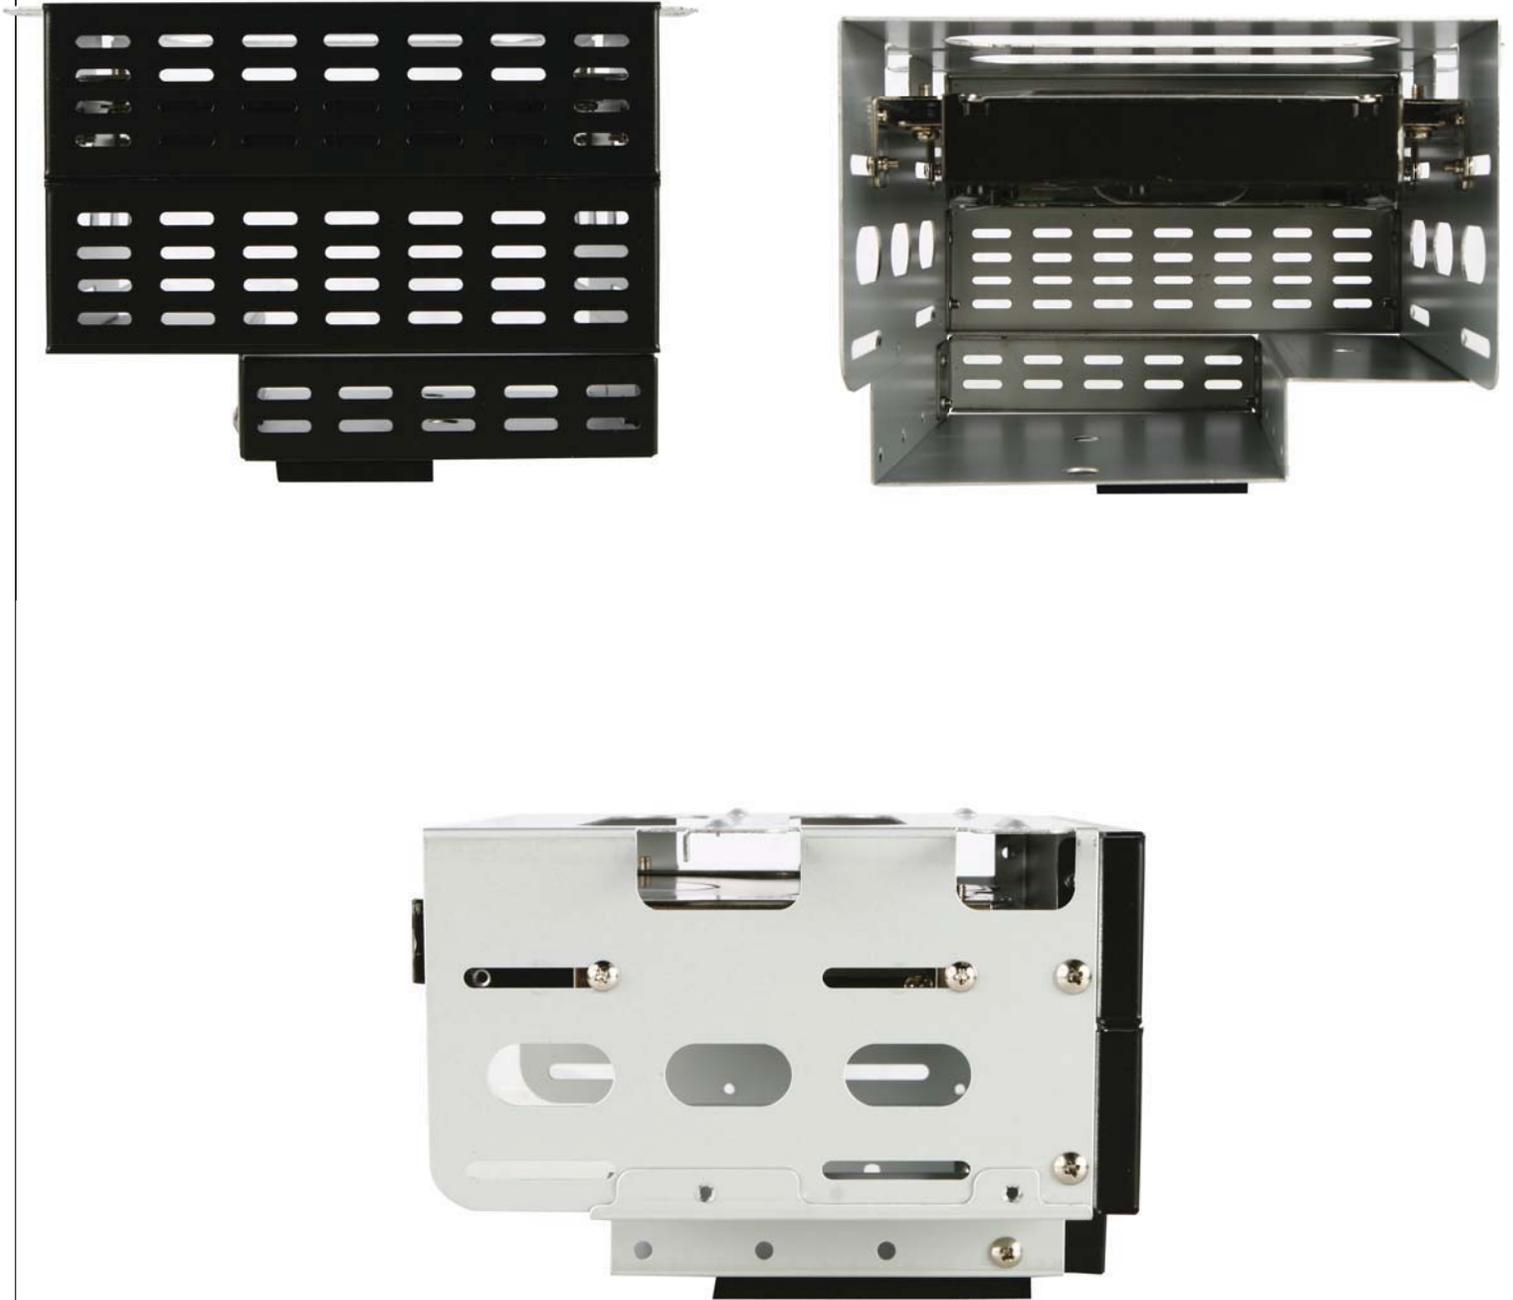

Maximum 1 x 3.5" hard drive can be installed in DIY-RHF03