


WNG Installation Guide

5 packages total

- A. Frame with mounting posts
- B. Frame with mounting posts, same as package A
- C. (2) Side panels
- D. Front glass door & rear perforated door
- E. Top and bottom with *supporting bars and hardware

*18U & 27U have 4 pcs supporting bars. 32U has 6 pcs.

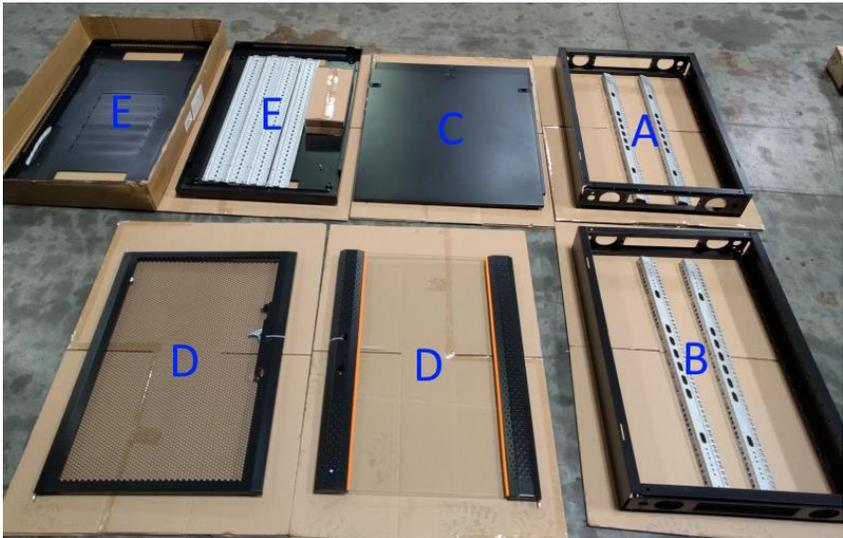


1. Install both frames to the *base with 8 screws and nuts
2. Make sure the **grounding post in the frame is against the base

*base is the piece with 4 leveling feet holes.

** the grounding post is in one of the corners of the frame with a sticker next to it.



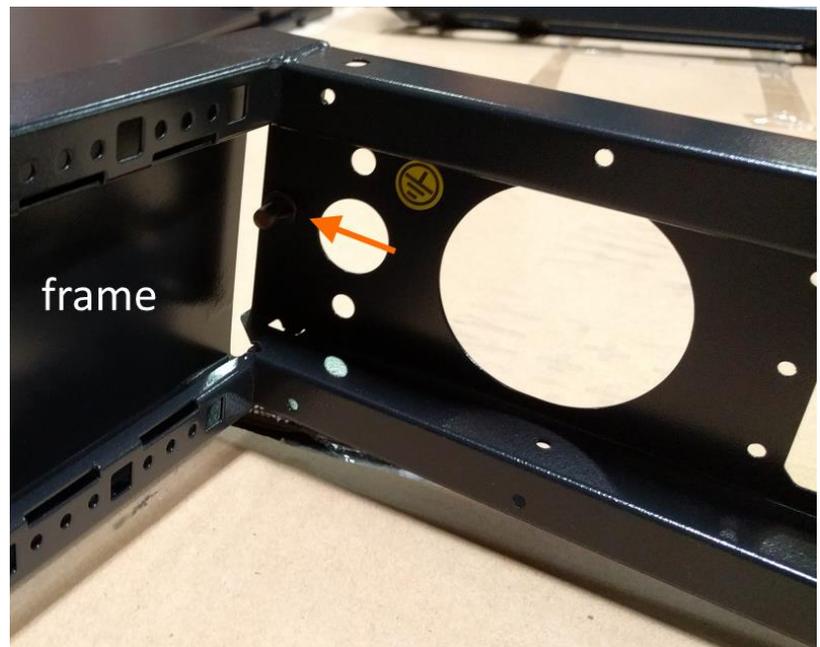

3. Use the tool comes with the hardware package to Install casters

Cannot install both casters and feet, either casters or feet only.



4. Install horizontal supporting bars

Before securing the horizontal bars, use one of the mounting posts to verify if mounting holes line up properly. There are 3 mounting holes on the post, and top and bottom holes will line up with horizontal bar's.



supporting bars



mounting post






verify mounting hole alignment






5. Secure both horizontal bars and mounting posts

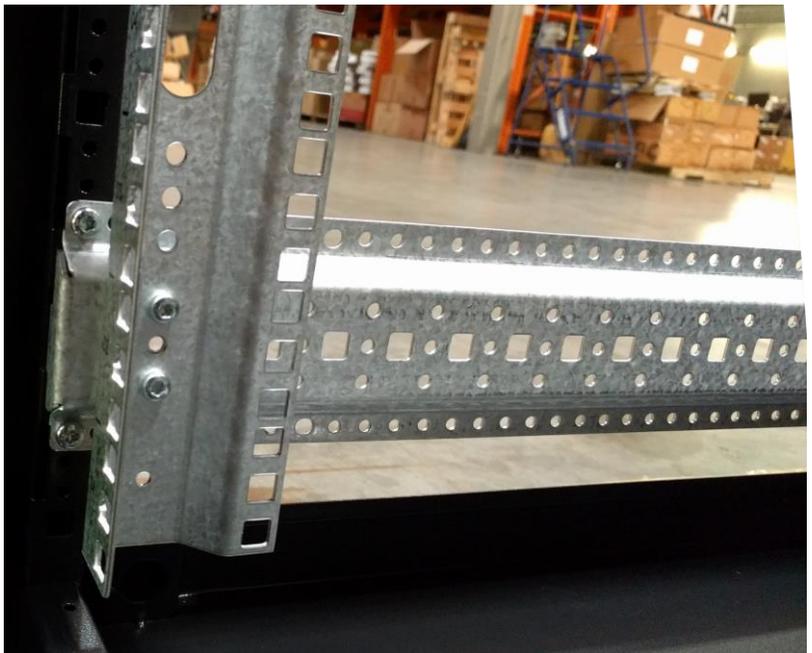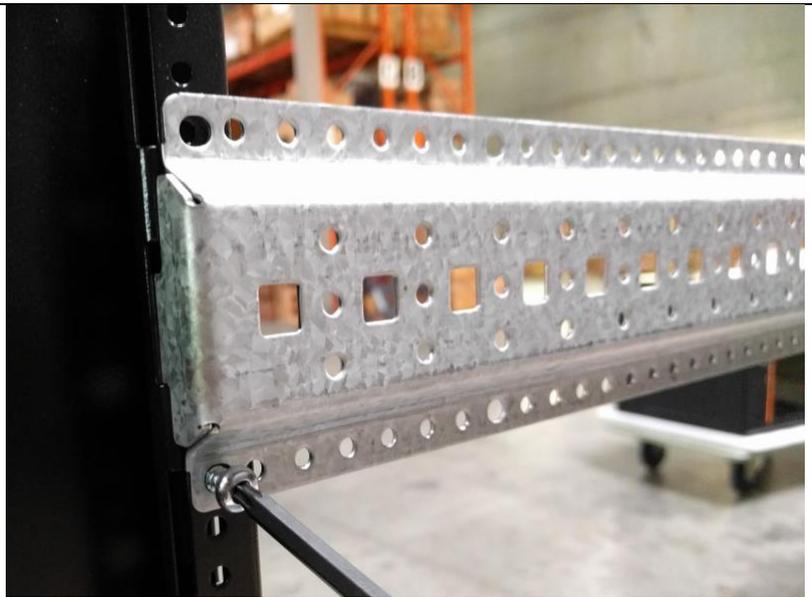

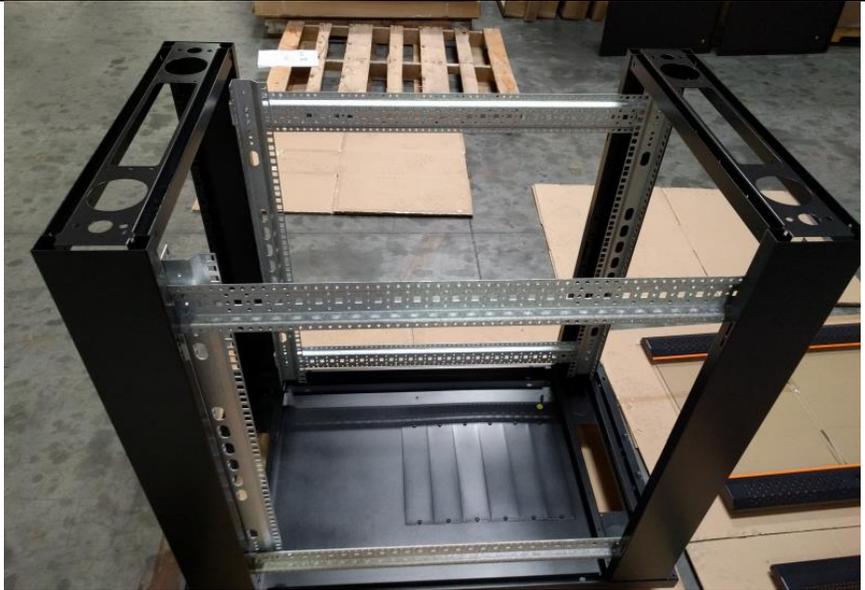

6. Put on top cover and secure it with the same (8) screws and (8) nuts as the base does.

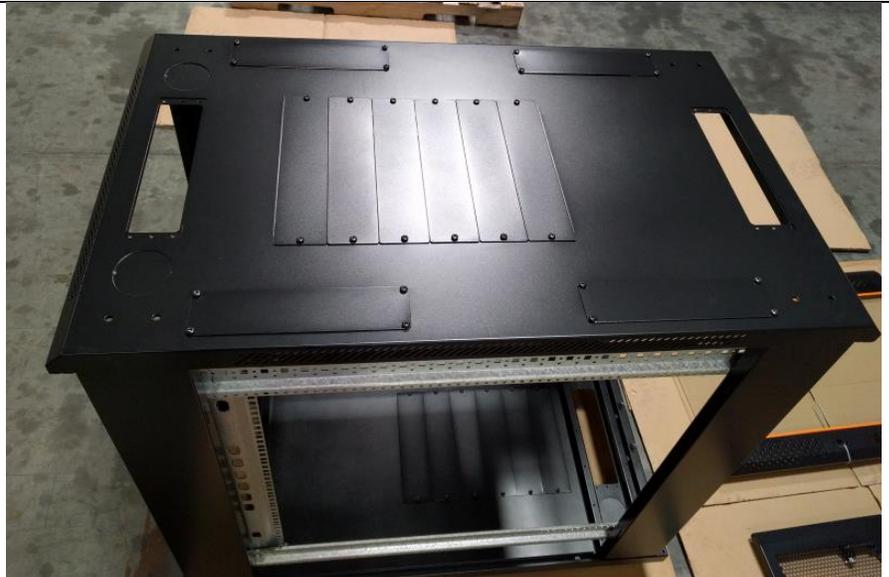

7. Install front and rear doors. Make sure the ring is in place.





8. Install key lock and secure it with 2 screws from inside



9. Install tongue. Make sure it is in correct open and close position



10. Once tongue is installed, pull it outwards to pass through the door frame when in close position. Then make sure tongue can go into the cabinet lock opening.



11. Install side panels
12. finish

